



motorola

Motorola FW200L

Fixed Wireless Telephone



Warning: Charge the phone for 16 hours before use.

Welcome...

to your new Motorola FW200L Fixed Wireless Telephone!

Fixed Wireless Features:

- GSM quad band (850 / 900 / 1800 / 1900MHz).
- Unlocked to all GSM (2G) networks.¹
- Send and receive SMS.
- Store up to 200 SMS messages on the FW200L base, messages can also be stored on the SIM card.²
- Battery back up (long rechargeable battery life).
- Store up to 1000 name and numbers in the FW200L base, contacts can also be stored on the SIM card.²
- Bright backlit display.
- Facility to block up to 20 phone numbers.
- Speakerphone for hands-free conversations.
- 8 speed dial memory keys for easy dialling.
- Choose from 20 different ringer melodies.
- Date, time and alarm facility.
- Caller ID shows you who's calling and see details of the last 20 callers in a calls list.
- Redial up to 20 of the last numbers called.
- FM radio.
- Calendar and calculator.
- Screen lock.

Need help?

If you have any problems setting up or using your FW200L, please contact Customer services: +34 902 006 949

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

¹3G and 4G SIM cards can be used in the FW200L, but will only be compatible with 2G network capabilities.

²Number dependent on the capacity of the SIM card. SIM card not included.

This User Guide provides you with all the information you need to get the most from your phone.

Before you make your first call you will need to set up your phone. Follow the simple instructions in ‘Getting Started’, on the next few pages.

Got everything?

- Corded handset and curly cord.
- Corded base with antenna.
- 3 x 550 mAh Ni-MH battery pack.
- Micro USB cord.
- Power adaptor.
- User guide.

For a better tomorrow

We make every effort through our design, research, engineering and supply chain management to make better products for everyone, focusing on both social and environmental responsibility.

- Meets and / or exceeds EMEA environmental regulatory requirements.
- Eco friendly packaging with a minimum 20% post consumer recycled content.
- Phone housing is built with a minimum of 25% post consumer recycled content plastic.
- Energy efficient charger that meets EU Code of Conduct requirements.

1.	Getting started	7
2.	Getting to know your phone	10
3.	Using the phone	15
3.1	Inserting the SIM.....	15
3.2	Switch the handset on / off	15
3.3	Calls15	
3.3.1	Make a call.....	15
3.3.2	Preparatory dialling.....	15
3.3.3	Make a call using speed dial keys	15
3.3.4	End a call.....	15
3.3.5	End a single call	16
3.3.6	Receive a call.....	16
3.4	Adjust the earpiece or hands-free volume.....	16
3.5	Mute.....	16
3.6	Hold	16
4.	Phonebook.....	17
4.1	Entering names and writing tips.....	17
4.2	Storing contacts	17
4.2.1	Preferred storage - SIM or phone.....	17
4.2.2	Store contacts	17
4.2.3	Move or copy individual contacts	18
4.2.4	Move or copy all contacts.....	18
4.3	View contacts.....	18
4.4	Dial contacts	18
4.5	Edit a contact	18
4.6	Delete a contact.....	19
4.7	Delete all contacts.....	19
4.8	Turn the speed dial memory on/off.....	19
4.9	Store a speed dial memory number.....	19
4.10	Edit a direct memory number.....	20
4.11	Delete a direct memory number.....	20
4.12	My number.....	20
4.12.1	Store your mobile number.....	20
4.12.2	Edit your mobile number.....	20
4.12.3	Delete your mobile number	21
4.13	Extra numbers.....	21
4.13.1	Store / Edit the owners number.....	21
4.13.2	Delete the owners number	21
4.13.3	Turn fixed dial on / off.....	22
4.13.4	Store a fixed dial number	22
4.13.5	Edit a fixed dial number	22
4.13.6	Delete a fixed dial number.....	23
4.13.7	Dial an SOS number	23

4.14	Memory status.....	23
4.15	Send text message to a phonebook contact.....	23
4.16	Add to blacklist.....	24
5.	Text messaging.....	25
5.1	Write a message.....	25
5.2	Send a message.....	25
5.3	Message boxes.....	26
5.4.1	Use a template.....	27
5.4.2	Create a template.....	28
5.4.3	Edit a template.....	28
5.4.4	Delete a template.....	28
5.5	SMS settings.....	29
5.5.1	Profile settings.....	29
5.5.2	Validity period.....	29
5.5.3	Message type.....	29
5.5.4	Delivery report.....	30
5.5.5	Reply path.....	30
5.5.6	Voicemail server.....	30
5.6	Memory status.....	30
5.7	Save sent messages.....	31
5.8	Preferred storage.....	31
6.	Call history.....	32
6.1	View a call log entry.....	32
6.2	Call a number in the call log.....	32
6.3	Send a message.....	32
6.4	Add to blacklist.....	32
6.5	Edit a number before you call.....	33
6.6	Delete an entry.....	33
6.7	Delete a call log.....	33
6.8	Call duration.....	33
6.9	Reset the call duration.....	34
7.	Organizer.....	35
7.1	Calendar.....	35
7.2	Alarm.....	35
7.3	Calculator.....	36
7.3.1	Enter calculator mode.....	36
7.3.1	Calculations.....	36
8.	Settings.....	37
8.1	Phone settings.....	37
8.1.1	Time and date.....	37
8.1.2	Language.....	38
8.1.3	Writing input methods.....	38
8.1.4	Turn off the display date and time.....	38
8.1.5	Screen lock.....	39


8.1.6	Dedicated keys	39
8.1.7	Display contrast.....	39
8.1.8	Backlight timeout.....	40
8.2	Call settings	40
8.2.1	Caller ID.....	40
8.2.2	Call waiting.....	40
8.2.3	Call divert	41
8.2.4	Call barring.....	42
8.2.5	Blacklist.....	43
8.2.6	Call time reminder	44
8.2.7	Answer mode.....	45
8.2.8	Delay dial.....	45
8.3	Network settings.....	45
8.4	Security settings	45
8.5	Restore settings.....	47
9.	Profile settings.....	48
9.1	Ringer.....	48
9.1.1	Ringtone.....	48
9.1.2	Ring volume	48
9.1.3	Ring type.....	48
9.2	Message.....	48
9.2.1	Message tone	48
9.2.2	Message tone volume	49
9.3	Keypad.....	49
9.3.1	Keypad tone.....	49
9.3.2	Keypad tone volume.....	49
9.4	Power on/off.....	49
9.4.1	Power on/off tone.....	49
9.4.2	Power on/off tone volume	50
9.5	Error tone.....	50
9.6	Alarm volume	50
9.7	Silent mode.....	50
10.	FM Radio.....	51
10.1	Turn the FM radio on.....	51
10.2	Turn the FM radio off.....	51
10.3	Manually input radio channels.....	51
10.4	Auto search radio channels.....	51
10.5	Channel list.....	52
11.	Help.....	53
12.	General information.....	54

1. Getting started

Important

 
Do not place your FW200L in the bathroom or other humid areas.

Signal strength


The  icon on your display indicates that you have a strong signal. When the signal strength reduces the number of bars reduces.

If you are on a call, the line will hang up if the base loses signal.

Underside of the base and inserting the SIM

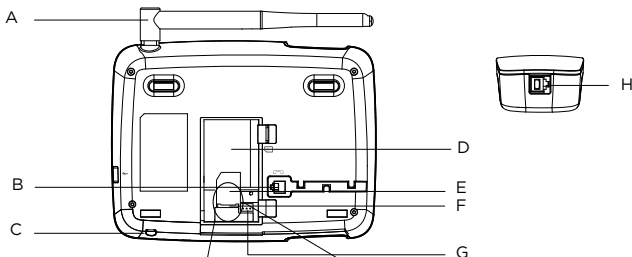

 1. Place the SIM card so that the bottom of the SIM lines up with the SIM bracket (F).



2. Using your finger slide the SIM card down until it won't go any further.



A Antenna

B Base curly cord socket

Plug the curly cord with the longer straight section and hook the cord into the cord track.

C Microphone

D Battery compartment

E SIM card slot

F SIM bracket

G Battery plug socket

H Handset curly cord socket

 
Plug the curly cord with the shorter straight section into the handset.


Note

Once the SIM card is installed, place the battery in (D) and plug the battery wire into (G) and then replace the battery cover.


Connecting the base to a PC / Charging the battery

1. Plug the USB cable into socket (A) on the side of the base.

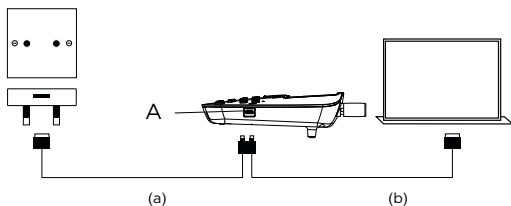

2. Insert the other end into either (a) an AC adapter and connect to the wall socket or (b) an active computer USB port.
3. The battery symbol on the display will scroll while charging and  will be displayed once the battery is fully charged.

Note

You do not need to have the battery installed for the phone to work. If the battery is not installed plug the base into a power source, the  icon will be displayed instead of the battery symbol.

Battery low warning

If you hear a warning beep every 30 seconds during a call or every 3 minutes in standby, you will need to recharge the battery or plug the phone into a power source before you can use it again.

Battery performance

In ideal conditions, a fully charged battery should give up to 8 hours talk time or up to 7 day standby time on a single charge.¹

Note that a new battery does not reach the full capacity until it has been put to normal use for several days.

Running the battery right down at least once a month will help it last as long as possible.

The charge capacity of the rechargeable battery will reduce with time as it wears out, giving less talk / standby time. Eventually it will need to be replaced.

After charging your phone for the first time, subsequent charging time is about 6-8 hours a day. The battery and phone may become warm during charging. This is normal.

¹All talk and standby times are approximate and depend on features selected and usage pattern.

Date and time

 
You can set the date and time for your FW200L. When setting the date and time check whether the time format setting is 12 or 24 hours. The default is 24 hours. To change the format, see "Set the time and date format" on page 37.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. **Time and date** is highlighted. Press **OK**.
4. Scroll ▼ to **Set time/date** and press **OK**.
5. Enter the time using the keypad, e.g. 14:45 for 02.45pm (24 hours).
If the time format is set to 12 hours, enter 02:45 for 02:45pm, then scroll ▼ to **AM/PM** and press ▲ or ▼ to highlight **AM** or **PM** and press **Select**.
6. Scroll ▼ to **MM/DD/YYYY** and enter the date using the keypad e.g. 12/10/2018 for 10 December 2018 and press **Save**.
7. Press Ⓞ to return to standby.

Your FW200L is now ready for use.

2. Getting to know your phone

Overview of your handset

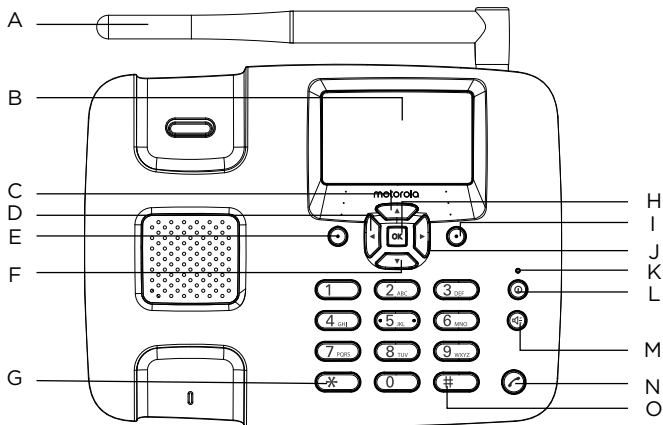

A Antenna

B Display

For display icons, see “Display” on page 12.

C Scroll up / FM Radio

Scroll up through lists and settings.

Press to turn on the FM Radio.

Press to move the cursor up.

D Scroll left / Add phonebook contact

Press to move the cursor to the left.

Press to enter the phonebook list.

E Menu / OK

Enter the main menu.

Select the option displayed on screen.

Confirm a menu option.

F Scroll down / Inbox

Scroll down through lists and settings.

Press to go straight to the messaging Inbox.

Press to move the cursor down.

G *

Press to dial a *.

Keep pressing to dial +, p or w.

H OK

Press this key to select the lower left corner function on the screen.

I Phonebook / Clear / Back

Enter the phonebook menu.

Delete characters on screen when entering names and numbers.

Go back to the previous menu, **Back** is displayed on the screen.

J Scroll right / Write a text message

Press to move the cursor to the left.

Press to go straight to the new message box.

K Charging light

L Power on/off / Exit

Press and hold for 3 seconds to switch the phone off or on.

When in the menu press to return to standby.

M Hands-free

Press to make, answer or end a hands-free call.

Press to switch hands-free on during a call.

N Redial list / Send call

Press to enter the redial list.

 
Once a telephone number is pre-dialled press to dial.

O # / Silent mode


Dial a #.

Press and hold to enter silent mode.


Display

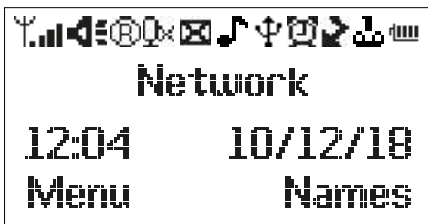



 Signal icon


 Displays when in hands-free mode


 Roaming

 Mute is activated


 Displays when you have new text messages


 Indicates the ringer is on

 Phone is in silent mode (replaces the ringer on icon)


 USB cable is connected


 Alarm is set

 
 Indicates a missed call


 Displays when you have new voicemails


 Keypad is locked


 Battery is fully charged

 Battery is partially charged

 Battery is running low

  Battery is almost fully discharged

 Battery is empty

 Charger is connected with no battery installed (replaces the battery icon)

Note






The icons will always align to the left and as higher priority icons appear the other icons will shift to the right. Some icons replace others along the top of the display depending on which function is activated.

If there are too many icons to view at the top of the display the battery icon will disappear.

Navigating the menus

Your phone menu has 7 sub-menus. Each sub-menu contains options that allow you to use the phonebook, change the ring tone, etc. You can use menus and sub-menus in two ways: by scrolling or by using shortcuts.

Scrolling through menus

1. From the standby screen, press **Menu** or .
The main menu is opened.
2. Use the  /  keys to scroll through the menu.
3. Left softkey or  - press to action the corresponding word prompt shown in the lower left corner of the display.
Right softkey - press to action the corresponding word prompt in the lower right corner of the display.
4. Press  to return to standby.

Shortcut keys

You can use a shortcut key to go to the preset option directly without scrolling through lists. To change one of the shortcuts, see "Dedicated keys" on page 39.

1. From the standby screen, press  /  /  /  to get to the preset shortcuts.

Menu map

Phonebook

Add new contact

When no contact is stored **Add new contact** is highlighted, press **Options** to add a contact. If contacts are stored the first contact is highlighted, either scroll ▲ to **Add new contact and press Options** to add a contact. Or scroll ▼ to the required contact and press **Options**.

View

Send text message

Call

Edit

Delete

Copy

Add to blacklist

Phonebook settings

Preferred storage

Speed dial

My number

Extra number

Memory status

Copy contacts

Move contacts

Delete all contacts

Messaging

Write message

Inbox

Drafts

Outbox

Sent messages

SMS templates

SMS settings

SIM

Memory status

Save sent message

Preferred storage

Call history

Missed calls

Dialled calls

Received calls

Delete call logs

Call timers

Organizer

Calendar

Alarm

Calculator

Settings

Phone settings

Time and date

Language

Pref. input method

Show date and time

Screen auto lock

Dedicated keys

Contrast

Backlight Time
Setting(sec)

Call settings

Caller ID

Call waiting

Call divert

Call barring

Advanced settings

Blacklist

Call time
reminder

Answer mode

Delay dial

Network settings

Network selection

Security settings

SIM security

Phone security

Restore settings

Profiles

Tone settings

Ring

Ringtone volume

Ring type

Message

Tone

Message volume

Key tone

Keypad

Keystone volume

Power on / off

Power on

Power off

Volume settings

System alert

Alarm volume

FM radio

Once in the menu
press **Options**:

Power off

Power on

Channel list

Manual input

Auto search

3. Using the phone


Note

Your phone will automatically time the duration of all external calls, the call timer will display on the screen. When the call ends, the total duration of your talk time is shown for 1 second.

3.1 Inserting the SIM



Make sure the phone is turned off (see below) and not connected to the power when you insert or remove the SIM card. Do not touch the metal plate area of the SIM card and keep away from electromagnetic fields.

3.2 Switch the handset on / off


1. Press and hold  for 3 seconds to switch the handset on / off.
2. Once turned on the phone will search for the network. After the phone is registered to the network, the signal will be displayed at the top left corner of the screen. The phone is now in standby and you can make or answer a call. Your phone remains in a searching state if it fails to find the available network.

3.3 Calls

3.3.1 Make a call

1. Lift the handset or press  to make a hands-free call.
2. Dial the number. If you make a mistake press **Clear** to delete the last digit. Either press  to dial or it will dial automatically after a set time. To set the time for automatic dialling, see “Delay dial” on page 45.

3.3.2 Preparatory dialling

1. Dial the number first. If you make a mistake press **Clear** to delete the last digit.
2. Lift the handset or press  to dial.

3.3.3 Make a call using speed dial keys

1. Press and hold the relevant keypad number to dial the pre-stored number directly.


Note

Key 1 will automatically be assigned with the voicemail number for your network provider.


Make sure the speed dial memory is set to on, see “Turn the speed dial memory on/off” on page 19.

To assign a speed dial number, see “Store a speed dial memory number” on page 19.

3.3.4 End a call

Either press **End**, place the handset back on the base or press  to end a hands-free call.

Note


If before the line connects, you decide that you want to end the call, replace the handset on the base or press **Abort**. To end a hands-free call press  or press **Abort**.

3.3.5 End a single call

1. During a call press **Options** and scroll ▼ to **End a single call** and press **Select**.
2. The call will end.

3.3.6 Receive a call

When you receive an external call, the phone rings, **Incoming call** and the phone number (or name if stored in the phonebook) is displayed.

1. Lift the handset or press **Answer** /  to answer the call hands-free.
2. If you don't want to answer the call, press **Reject** and the caller will be redirected.

3.4 Adjust the earpiece or hands-free volume

1. During a call, press ► to increase and ◀ to decrease the volume level. There are 8 levels to choose from, volumes 1-7 and off.

Note

You can also adjust the volume during a call by pressing **Options** scrolling ▲ to **Volume**, pressing **Select** and then pressing ► to increase and ◀ to decrease the volume level.

3.5 Mute

1. During a call press **Options** and scroll ▼ to **Mute** and press **Select**.
2. To turn mute off, press **Options** and scroll ▼ to **Unmute** and press **Select**.

3.6 Hold

You can place your caller on hold if your network operator provides the service.

1. During a call press **Options**, **Hold** is highlighted, press **Select**.
2. To turn hold off, press **Options**, **Unhold** is highlighted, press **Select**.

4. Phonebook

The FW200L phonebook has a capacity of up to 1000 contacts in the base and you can also store additional contacts on the SIM (the number is dependent on the SIM capacity).

Numbers can be up to 40 digits long and names can be up to 20 characters long. Contacts are stored in alphabetical order.

Note

All phonebook features can also be accessed while on a call. Press **Options** and scroll ▼ to **Phonebook** and press **Select**.

4.1 Entering names and writing tips

Use the alphanumeric keypad to enter names in the phonebook. For instance to enter the name TOM.

T Press (8_{TUT}) once

O Press (6_{NO}) three times

M Press (6_{MNO}) once

To enter a space press (0).

Press **Clear** to delete a character or press and hold **Clear** to delete characters quickly.

When entering a name into the phonebook you can scroll through the character input methods (abc, ABC, 123 etc) by pressing the (#) button repeatedly.

4.2 Storing contacts

The FW200L can be set so it stores contacts either to the SIM card or the phone and you can copy or move individual contacts or the whole phonebook from the SIM card to the phone or from the phone to the SIM card.

4.2.1 Preferred storage - SIM or phone

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. **Preferred storage** is highlighted, press **OK**.
4. Scroll ▲ or ▼ to **SIM** or **Phone** and press **OK**.
5. Press (⊙) to return to standby.

4.2.2 Store contacts

1. Press **Names**. The first contact is highlighted.
2. Scroll ▲ to **Add new contact** and press **Options**.
3. Press **Select** and enter the name using the keypad.
4. Scroll ▼ and enter the number and press **Options**.
5. Press **Save** to store.
6. Press (⊙) to return to standby.

Note

Cancel storing a contact by pressing **Ⓞ** at any time during the process.

4.2.3 Move or copy individual contacts

1. Press **Names**. The first contact is highlighted.
2. Scroll **▲** or **▼** to the contact you want to copy and press **Options**. Scroll **▼** to **Copy** and press **Select**.
3. Scroll **▲** or **▼** to **To Phone** or **To SIM** and press **Select**.
4. Press **Ⓞ** to return to standby.

4.2.4 Move or copy all contacts

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll **▲** to **Phonebook settings** and press **Select**.
3. Scroll **▼** to **Copy contacts** or **Move contacts** and press **OK**.
4. Scroll **▲** or **▼** to **To Phone** or **To SIM** and press **OK**.
5. Press **Yes** to confirm or **No** to cancel.
6. Press **Ⓞ** to return to standby.

Note

When moving or copying contacts the FW200L will move / copy all contacts even if that contact is already saved.

4.3 View contacts

1. Press **Names**. The first contact is highlighted.
2. Scroll **▲** or **▼** to the contact you want to view and press **Options**. **View** is highlighted, press **Select**.
3. The name is highlighted, press **▼** to view the number.
4. Press **Ⓞ** to return to standby.

4.4 Dial contacts

1. Press **Names**. The first contact in the phonebook is highlighted.
2. Scroll **▲** or **▼** to the contact you want to dial and press **Options**. Scroll **▼** to **Call** and press **Select** to dial the contact.

4.5 Edit a contact

1. Press **Names**. The first contact is highlighted.
2. Scroll **▲** or **▼** to the contact you want to edit and press **Options**.
3. Scroll **▼** to **Edit** and press **Select**.
4. Edit the name. Press **Clear** to delete characters.
5. Scroll **▼** and edit the number. Press **Options** and then **Save** to confirm.
6. Press **Ⓞ** to return to standby.

4.6 Delete a contact

1. Press **Names**. The first contact is highlighted.
2. Scroll ▲ or ▼ to the contact you want to delete and press **Options**.
3. Scroll ▼ to **Delete** and press **Select**.
4. Display shows **Delete?**. Press **Yes** to delete or **No** to cancel.
5. Press Ⓞ to return to standby.

4.7 Delete all contacts

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▲ to **Delete all contacts** and press **OK**.
4. Press ▲ or ▼ to select either **From SIM** or **From Phone** and press **OK**.
5. Display shows **Delete all?**. Press **Yes** to delete or **No** to cancel.
6. Press Ⓞ to return to standby.

4.8 Turn the speed dial memory on/off

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Speed dial** and press **OK**.
4. **Status** is highlighted, press **OK**.
5. Scroll ▲ or ▼ to **On** or **Off** and press **OK**.
6. Press Ⓞ to return to standby.

4.9 Store a speed dial memory number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Speed dial** and press **OK**.
4. Scroll ▼ to **Set numbers** and press **OK**.
If no number is stored **Empty** is displayed. If a number is stored the name will be displayed.
5. Scroll ▼ to an available keypad number 2-9 where the contact will be stored. Press **Edit**, the first contact is displayed. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact contact, then press **OK**.
6. Press Ⓞ to return to standby.

Note

Only numbers that have been stored in the phonebook can then be stored as direct memory numbers.

To dial direct memory numbers, see “Store a speed dial memory number” on page 19.

4.10 Edit a direct memory number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Speed dial** and press **OK**.
4. Scroll ▼ to **Set numbers** and press **OK**.
5. Scroll ▼ to the contact you want to edit. Press **Options**.
6. **Edit** is highlighted, press **Select** the first contact in the phonebook is displayed. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact contact, then press **OK**.
7. Press Ⓞ to return to standby.

4.11 Delete a direct memory number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Speed dial** and press **OK**.
4. Scroll ▼ to **Set numbers** and press **OK**.
5. Scroll ▼ to the contact you want to delete. Press **Options**.
6. Scroll ▼ to **Remove** and press **Select**.
7. Press Ⓞ to return to standby.

4.12 My number

You can store your number in the phone.

4.12.1 Store your mobile number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **My number** and press **OK**.
4. If no number is stored, press **Add**, enter the name using the keypad.
5. Scroll ▼ and enter the number and press **Options**.
6. Press **Save** to store.

4.12.2 Edit your mobile number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **My number** and press **OK**.
4. Press **Options**, **Edit my number** is highlighted, press **Select**.
5. Edit the name. Press **Clear** to delete characters.
6. Scroll ▼ and edit the number. Press **Options** and then **Save** to confirm.
7. Press Ⓞ to return to standby.

4.12.3 Delete your mobile number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **My number** and press **OK**.
4. Press **Options**, scroll ▼ to **Delete** and press **Select**.
5. Display shows **Delete?**. Press **Yes** to delete or **No** to cancel.
6. Press Ⓞ to return to standby.

4.13 Extra numbers

These features are network service dependent.

4.13.1 Store / Edit the owners number

You can store the owner number on the SIM only.

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Extra number** and press **OK**.
4. **Owner number** is highlighted, press **OK**.
5. Press **Options**, **Edit** is highlighted, press **Select**.
6. Enter the name. Press **Clear** to delete characters.
7. Scroll ▼ and enter the number. Press **Options** and then **Save** to confirm.
8. Press Ⓞ to return to standby.

4.13.2 Delete the owners number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Extra number** and press **OK**.
4. **Owner number** is highlighted, press **OK**.
5. Press **Options**, Scroll ▼ to **Delete** and press **Select**.
6. Display shows **Delete?**. Press **Yes** to delete or **No** to cancel.
7. Press Ⓞ to return to standby.

Fixed dial numbers

Up to 15 numbers can be added to the fixed dial list, when the fixed dial mode is turn on only the numbers in the fixed dial list can be called. This is dependent on the SIM card having the feature.

4.13.3 Turn fixed dial on / off

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Extra number** and press **OK**.
4. Scroll ▼ to **Fixed dial** and press **OK**.
5. **Mode** is highlighted, press **OK**.
6. Scroll ▲ or ▼ to select **On** or **Off** and press **OK**.
7. Enter the PIN2 number (provided by communication operator) and press **OK** to save.
8. Press Ⓞ to return to standby.

4.13.4 Store a fixed dial number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Extra number** and press **OK**.
4. Scroll ▼ to **Fixed dial** and press **OK**.
5. Scroll ▼ to **Fixed dial list** and press **OK**. Press **Add**.
6. Enter the name. Press **Clear** to delete characters.
7. Scroll ▼ and enter the number. Press **Options** and then **Save** to confirm.
8. Enter the PIN2 number and press **OK** to save.

4.13.5 Edit a fixed dial number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Extra number** and press **OK**.
4. Scroll ▼ to **Fixed dial** and press **OK**.
5. Scroll ▼ to **Fixed dial list** and press **OK**.
6. Scroll ▼ to the number you want to edit.
7. Press **Options**, **Edit** is highlighted, press **Select**.
8. Edit the name. Press **Clear** to delete characters.
9. Scroll ▼ and edit the number. Press **Options** and then **Save** to confirm.
10. Press Ⓞ to return to standby.

4.13.6 Delete a fixed dial number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Extra number** and press **OK**.
4. Scroll ▼ to **Fixed dial** and press **OK**.
5. Scroll ▼ to **Fixed dial list** and press **OK**.
6. Scroll ▼ to the number you want to delete.
7. Press **Options**, scroll ▼ to **Delete** and press **Select**.
8. Display shows **Delete?**. Press **Yes** to delete or **No** to cancel.
9. Press Ⓞ to return to standby.

4.13.7 Dial an SOS number

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Extra number** and press **OK**.
4. Scroll ▼ to **SOS numbers** and press **OK**.
5. Scroll ▼ to the SOS number you require and press **Call** to dial.

4.14 Memory status

You can check how much phonebook memory you have on your phone or on the SIM.

1. Press **Names**. The first contact is highlighted. Press **Options**.
2. Scroll ▲ to **Phonebook settings** and press **Select**.
3. Scroll ▼ to **Memory status** and press **OK**.
4. The number of phone numbers stored and available spaces are displayed on the screen.

4.15 Send text message to a phonebook contact

1. Press **Names**. The first contact is highlighted.
2. Scroll ▲ or ▼ to the contact you want to send a message to and press **Options**. Scroll ▼ to **Send text message** and press **Select**.
3. Using the keypad write your message and press **Options**.
4. **Send to** is highlighted.
5. Press **Select**, **Options** and **Select** to send.

Note

For other text messaging options, see “Text messaging” on page 25.

4.16 Add to blacklist

You can add a phonebook contact to the blacklist, so that when the contact calls the phone does not ring.

1. Press **Names**. The first contact is highlighted.
2. Scroll ▲ or ▼ to the contact you want to add and press **Options**. Scroll ▲ to **Add to Blacklist** and press **Select**.
3. Press **Yes** to store or **No** to cancel.
4. Press Ⓞ to return to standby.

5. Text messaging

Your FW200L can send and receive text messages from participating mobile networks and compatible landline telephones.

Note

All messaging features can also be accessed while on a call. Press **Options** and scroll ▼ to **Messaging** and press **Select**. If you write a message it will be stored to the **Outbox** and you can send it once the call has ended, see "Outbox" on page 27.

5.1 Write a message

If you are writing a text and you receive a call, the text will be displayed again when the call is disconnected.

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. **Write message** is highlighted, press **OK**.
3. Use the keypad to enter your message.
4. Press **Options** and scroll ▲ or ▼ to:

Options

Actions

Input method

Press **Select**. Scroll ▼ to the input method you prefer and press **OK**.

Insert Template

Press **Select**. The list of templates is displayed. Scroll ▼ to highlight the template you want then press **Select**.

Advanced

Press **Select**. Either select **Insert number** or scroll ▼ to **Insert name** and press **Select**. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact contact, then press **OK**. The number or name will be inserted.

Save

Press **Select** and the message will be saved to **Drafts**.

5. To send the message see below.

5.2 Send a message

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. **Write message** is highlighted, press **OK**.
3. Use the keypad to enter your message.
4. Press **Options**. **Send to** is highlighted.

To enter a number manually

1. Press **Select** and **OK**.
2. Using the keypad enter the phone number and press **OK**. Either scroll ▲ to **Enter number** to add another number or press **Options** and **Send** to send the message.

To enter a number from the phonebook

1. Press **Select** and scroll ▼ to **Add from Phonebook** and press **OK**. The first contact is displayed. Enter the first letter of the name to search alphabetically then scroll ▲ or ▼ to the exact contact, then press **OK**.
2. Either scroll ▲ to **Add from Phonebook** to add another contact or press **Options** and **Send** to send the message.

5.3 Message boxes

Messages can be stored in different boxes, these include Inbox, Drafts, Outbox and Sent messages.

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▼ to the message box you want and press **OK**.
3. Scroll ▼ to the message you want and press **Options**, **View** is highlighted press **Select**.
4. The message is displayed. Press **Options** and scroll ▼ to the option you require, as listed below.

Inbox - Received messages

Options	Actions
Reply	Press Select to reply to the message. See 5.1 and 5.2 for message writing and message sending options.
Call sender	Press Select to call the sender.
Forward	Press Select to forward the message. See 5.1 and 5.2 message writing and message sending options.
Delete	Press Select to delete the individual message. Press Yes to delete or No to cancel.
Save as template	Press Select to save the message as a template.
Advanced	Press Select and Use number is highlighted, if the text message has a number in the text press Select and the number will be highlighted. Press Options and you can then call the number, save it to the phonebook or send a text message. Scroll ▼ to Use USSD , press Select and the number will be highlighted. Press Options and you can then call the number or save it to the phonebook.

Drafts - Messages saved and not sent

Options	Actions
Send	Press Select to send the message. See 5.2 for message sending options.
Edit	Press Select to edit the message. See 5.1 for message writing options.
Delete	Press Select to delete the message. See 5.1 for message writing options.
Advanced	Press Select and Use number is highlighted, if the text

message has a number in the text press **Select** and the number will be highlighted. Press **Options** and you can then call the number, save it to the phonebook or send a text message. Scroll ▼ to **Use USSD**, press **Select** and the number will be highlighted. Press **Options** and you can then call the number or save it to the phonebook.

Outbox - Messages sent that did not send

Options	Actions
Resend	Press Select to resend the message.
Edit	Press Select to edit the message. See 5.1 for message writing options
Delete	Press Select to delete the message. See 5.1 for message writing options.
Save as template	Press Select to save the message as a template.
Advanced	Press Select and Use number is highlighted, if the text message has a number in the text press Select and the number will be highlighted. Press Options and you can then call the number, save it to the phonebook or send a text message. Scroll ▼ to Use USSD , press Select and the number will be highlighted. Press Options and you can then call the number or save it to the phonebook.

Sent messages - Messages that have been sent

Options	Actions
Forward	Press Select to forward the message. See 5.1 and 5.2 message writing and message sending options.
Delete	Press Select to delete the individual message. Press Yes to delete or No to cancel.
Save as template	Press Select to save the message as a template.
Advanced	Press Select and Use number is highlighted, if the text message has a number in the text press Select and the number will be highlighted. Press Options and you can then call the number, save it to the phonebook or send a text message. Scroll ▼ to Use USSD , press Select and the number will be highlighted. Press Options and you can then call the number or save it to the phonebook.

5.4 SMS templates

You can use a default message template or create your own template when writing a message. Each can store up to 10 messages. Templates that have been created can be edited, deleted or used directly. Default templates can only be used directly.

5.4.1 Use a template

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS templates** and press **OK**.

3. **User defined** is highlighted, press **OK** to select, or scroll ▼ to **Default** and press **OK**.
4. The templates are listed, scroll to the template you want to use and press **Options**.
5. **Use** is highlighted, press **Select**.
6. The template will be added to a new message box.

5.4.2 Create a template

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS templates** and press **OK**.
3. **User defined** is highlighted, press **OK**.
4. If templates have already been created, they are listed.
5. Press **Options** and scroll ▼ to **Add**.
6. Using the keypad, write the message, press **Options** and then **Select** to save.

5.4.3 Edit a template

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS templates** and press **OK**.
3. **User defined** is highlighted, press **OK**.
4. Scroll ▼ to the template you want to edit and press **Options**:
5. Scroll ▼ to **Edit** and press **Select**.
6. Edit your message and press **Options**:

Options	Actions
Save	Press Select to save the edited template.
Save as new template	Press Select to save as a new template.
Cancel	Press Select to go back to the templates without saving the changes.
Input method	Press Select . Scroll ▼ to the input method you prefer and press OK .

5.4.4 Delete a template

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS templates** and press **OK**.
3. **User defined** is highlighted, press **OK**.
4. Scroll ▼ to the template you want to delete and press **Options**.
5. Scroll ▼ to **Delete** and press **Select**.
6. Press **Yes** to delete or **No** to cancel.
7. Press Ⓞ to return to standby.

5.5 SMS settings

5.5.1 Profile settings

The number of SIM profiles is determined by the SIM. In the FW200L and you can set different SMSC (short message service centre) addresses so that the phone sends messages through a specified SMSC server.

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS settings** and press **OK**.
3. **SIM** is highlighted, press **Select**.
4. **Profile settings** is highlighted, press **Select**.
5. Scroll ▲ or ▼ to **Profile 1** or **Profile 2** etc and press **Options**.
6. **Activate** is highlighted, press **Select** to activate or scroll ▼ to **Edit** and press **Select**.
7. To edit the name, press **Clear** to delete the current name and then using the keypad enter the new name. Scroll ▼ to **SMSC address**, press **Clear** to delete the current address and then using the keypad enter the new one. Press **Options** and **Select** to save.
8. Press Ⓞ to return to standby.

5.5.2 Validity period

You can set the amount of time a message that fails to send is stored in the SMSC server. You can choose between 1 hour / 6 hours / 12 hours / 1 day / 3 days / 1 week / Maximum (indefinitely).

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS settings** and press **OK**.
3. **SIM** is highlighted, press **Select**.
4. Scroll ▼ to **Validity period** and scroll ◀ or ▶ to the period you require, press **Save** to confirm.
5. Press Ⓞ to return to standby.

5.5.3 Message type

You can set the type of message that is sent. You can choose between Text / Fax Group 3 / Fax Group 4 / Page / Email.

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS settings** and press **OK**.
3. **SIM** is highlighted, press **Select**.
4. Scroll ▼ to **Message type** and scroll ◀ or ▶ to the message type you require, press **Save** to confirm.
5. Press Ⓞ to return to standby

5.5.4 Delivery report

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS settings** and press **OK**.
3. **SIM** is highlighted, press **Select**.
4. Scroll ▼ to **Delivery report** and scroll ◀ or ▶ to the **On** or **Off** and press **Save** to confirm.
5. Press Ⓞ to return to standby.

5.5.5 Reply path

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS settings** and press **OK**.
3. **SIM** is highlighted, press **Select**.
4. Scroll ▼ to **Reply path** and scroll ◀ or ▶ to the **On** or **Off** and press **Save** to confirm.
5. Press Ⓞ to return to standby.

5.5.6 Voicemail server

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS settings** and press **OK**.
3. **SIM** is highlighted, press **Select**.
4. Scroll ▼ to **Voicemail server** and press **Select**.
5. Scroll ▲ or ▼ to the entry you want and press **Options**.
6. You can then either **Call**, **Edit** or **Set default mailbox**.
7. If **Call** is selected, press **Select** the voicemail server stored will be called.
8. If **Edit** is selected, press **Select**, the name is highlighted, press **Clear** to delete the current name and then using the keypad enter the new name. Scroll ▼ to **Number**, press **Clear** to delete the current number and then using the keypad enter the new one. Press **Options** and **Select** to save.
9. If **Set default mailbox** is selected, press **Select** to save.
10. Press Ⓞ to return to standby.

Note

The Set default mailbox may not be visible as this is dependent on the SIM card.

5.6 Memory status

You can check how many messages are stored on your phone or on the SIM.

1. Press **Menu**, scroll ▼ to **Messaging** and press **OK**.
2. Scroll ▲ to **SMS settings** and press **OK**.
3. Scroll ▼ to **Memory status** and press **Select**.
4. The number of messages stored and available spaces are displayed on the screen.

5. Press **⊙** to return to standby.

5.7 Save sent messages

1. Press **Menu**, scroll **▼** to **Messaging** and press **OK**.
2. Scroll **▲** to **SMS settings** and press **OK**.
3. Scroll **▼** to **Save Sent message** and scroll **◀** or **▶** to the **On** or **Off** and press **Save** to confirm.
4. Press **⊙** to return to standby.

5.8 Preferred storage

1. Press **Menu**, scroll **▼** to **Messaging** and press **OK**.
2. Scroll **▲** to **SMS settings** and press **OK**.
3. Scroll **▲** to **Preferred storage** and scroll **◀** or **▶** to the **SIM** or **Phone** and press **Save** to confirm.
4. Press **⊙** to return to standby.

6. Call history

You can view or delete your recent calls and see the duration of those calls in the FW200L call history menu, there are 3 call logs, Missed calls, Dialed calls and Received calls, each log can store up to 20 entries.

Note

All call history features can also be accessed while on a call. Press **Options** and scroll ▼ to **Call history** and press **Select**.

6.1 View a call log entry

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Press **OK** to select **Missed calls** or scroll ▼ to **Dialed calls** or **Received calls** and press **OK**.
3. Scroll ▲ or ▼ to the entry you want to view and press **Options**.
4. Press **Select** to view the number.

6.2 Call a number in the call log

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Press **OK** to select **Missed calls** or scroll ▼ to **Dialed calls** or **Received calls** and press **OK**.
3. Scroll ▲ or ▼ to the number you want to call and press **Options**.
4. Scroll ▼ to **Call** and press **Select** to call.

6.3 Send a message

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Press **OK** to select **Missed calls** or scroll ▼ to **Dialed calls** or **Received calls** and press **OK**.
3. Scroll ▲ or ▼ to the contact you want to send a message to and press **Options**.
4. Scroll ▼ to **Send text message** and press **Select**.
5. Using the keypad write your message and press **Options**. **Send to** is highlighted.
6. Press **Select**, **Options** and **Select** to send.

Note

For other text messaging options, see “Text messaging” on page 25.

6.4 Add to blacklist

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Press **OK** to select **Missed calls** or scroll ▼ to **Dialed calls** or **Received calls** and press **OK**.
3. Scroll ▲ or ▼ to the contact you want to add and press **Options**.
4. Scroll ▼ to **Add to Blacklist** and press **Select**.
5. Press **Yes** to store or **No** to cancel.
6. Press Ⓞ to return to standby.

6.5 Edit a number before you call

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Press **OK** to select **Missed calls** or scroll ▼ to **Dialled calls** or **Received calls** and press **OK**.
3. Scroll ▲ or ▼ to the contact you want to edit and press **Options**.
4. Scroll ▲ to **Edit before call** and press **Select**.
5. The number is displayed. Edit the number where necessary.
6. Press **Options** and **Select** to call the edited number.

Note

You can also store this edited number to the phonebook. Once you have edited the number press **Options** and then scroll ▼ to **Save to Phonebook** and press **Select**. Using the keypad enter the name, press **Options** and press **Select** to save.

6.6 Delete an entry

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Press **OK** to select **Missed calls** or scroll ▼ to **Dialled calls** or **Received calls** and press **OK**.
3. Scroll ▲ or ▼ to the entry you want to delete and press **Options**.
4. Scroll ▲ to **Delete** and press **Select**.
5. Press **Yes** to delete or **No** to cancel.
6. Press Ⓞ to return to standby.

6.7 Delete a call log

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Scroll ▼ to **Delete call logs** and press **OK**.
3. Scroll ▼ to the log you want to delete or **All calls** and press **OK**.
4. Press **Yes** to delete or **No** to cancel.
5. Press Ⓞ to return to standby.

6.8 Call duration

You can view the call duration of your last call or the total call duration of your Dialled calls and Received calls.

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Scroll ▲ to **Call timers** and press **OK**.
3. **Last call** is highlighted, press **OK** to see the duration of that call, or scroll ▼ to the log you want to see the total call duration for and press **OK** to view the duration.
4. The time will be displayed.
5. Press Ⓞ to return to standby.

6.9 Reset the call duration

1. Press **Menu**, scroll ▼ to **Call history** and press **OK**.
2. Scroll ▲ to **Call timer** and press **OK**.
3. Scroll ▲ to **Reset all** and press **OK**.
4. Press **Yes** to reset or **No** to cancel.
5. Press Ⓞ to return to standby.

7. Organizer

7.1 Calendar

The FW200L has a calendar so you can look up dates and jump to a chosen day.

1. Press **Menu**, scroll ▼ to **Organizer** and press **OK**.
2. **Calendar** is highlighted, press **OK**.
3. Scroll ▼ to the day you want to view and press the left softkey Ⓞ.
4. **Jump to date** is highlighted, press **Select**.
5. To go back to today's date, press **OK** then press the left softkey Ⓞ.
6. Scroll ▼ to **Go to today** and press **Select**.
7. Press Ⓞ to return to standby.


7.2 Alarm

The FW200L has a built in alarm facility. There is the option to set 5 alarms that either ring once, daily or custom set to ring on particular days of the week.

Set and edit an alarm

1. Press **Menu**, scroll ▼ to **Organizer** and press **OK**.
2. Scroll ▼ to **Alarm** and press **OK**.
3. The first alarm time is highlighted (default is 12:00 or 00:00 depending on the time format set), either press **Edit** or scroll ▼ to the required alarm and press **Edit**.
4. The screen shows **Status** and the current setting (default is off). Scroll ► to **On**.
5. Scroll ▼, the screen shows **Time** and the current time, set/edit the alarm time. If the time format is set to 12 hours, scroll ▼ and then press ► to set to **AM** or **PM**.
6. Scroll ▼, the screen shows **Repeat** and the current setting (default is **Once**). Press **Options** and **Select** and scroll ▼ to select either **Once**, **Everyday** or **Custom**. If **Custom** is selected, the days of the week are listed (only the first 3 are visible), scroll ▼ to the day you want to add, press **Options**, **On** is highlighted, press **Select**. If you want to add more days follow the same procedure. Once all required days are selected, press **Options** and then scroll ▼ to **Done**.
7. Scroll ▼, the screen shows **Alarm tone** and the current tone (the default tone is Ring 1), press **Options** and then **Select**, the ring tones are listed, scroll ▼ to the ring tone you require and press **Select**.
8. To save the alarm either press **Options** and scroll ▼ to **Save** or scroll ▼ to **Status** and press **Save**.

Note

If the alarm is set to **Once**,  will disappear from the screen after the alarm has been stopped.

When the alarm rings:

Press **Stop** to turn the alarm off.

Press **Snooze** for the alarm to repeat after 5 minutes.

7.3 Calculator

Your FW200L can be used as a calculator, it can perform basic additions, subtractions, multiplication and division.

7.3.1 Enter calculator mode

1. Press **Menu**, scroll ▼ to **Organizer** and press **OK**.
2. Scroll ▼ to **Calculator** and press **OK**.

7.3.1 Calculations

1. Once in calculator mode, use the keypad to add the first number and then press ◀▶▲▼ to choose the type of calculation you require.

The keys used when in calculator mode

Addition	+	▲
Subtract	-	▼
Multiply	x	◀
Divide	÷	▶
Delete	C	Clear
Equals	=	OK

2. Enter the next number of the calculation, once completed press **OK** the screen will display the result.

8. Settings

8.1 Phone settings

8.1.1 Time and date

Set the time zone

You can manually change the time zone of your FW200L.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. **Time and date** is highlighted. Press **OK**.
4. **Set time zone** is highlighted. Press **OK**.
5. Scroll ▲ or ▼ to the time zone you require and press **OK**.
6. Press Ⓞ to return to standby.

Set the date and time

You can set the date and time from the FW200L. When setting the date and time check whether the time format setting is 12 or 24 hours. The default is 24 hours. To change the time format, see below.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. **Time and date** is highlighted. Press **OK**.
4. Scroll ▼ to **Set time/date** and press **OK**.
5. Enter the time using the keypad, e.g. 14:45 for 02.45pm (24 hours).
If the time format is set to 12 hours, enter 02:45 for 02:45pm, scroll ▼, **AM/PM** is displayed. Press ► to select **AM** or **PM**.
6. Scroll ▼ to **MM/DD/YYYY** and enter the date using the keypad e.g. 12/10/2018 for 10 December 2018 and press **Save**.
7. Press Ⓞ to return to standby.

Set the time and date format

The time and date format shown on the standby screen can be changed.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. **Time and date** is highlighted. Press **OK**.
4. Scroll ▼ to **Set format** and press **OK**.
5. The display shows **Time**, scroll ◀ or ▶ to choose **12** or **24** hours.
6. Scroll ▼, **Date** is displayed. Scroll ◀ or ▶ to choose **YYYY MM DD**, **DD MM YYYY** or **MM DD YYYY** and press **Save**.
7. Press Ⓞ to return to standby.

Update with time zone

You can set the FW200L so that when you receive a call it does not automatically set the time zone for the date and time.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. **Time and date** is highlighted. Press **OK**.
4. Scroll ▲ to **Update with time zone** and press **OK**.
5. The current setting is highlighted, scroll ▲ or ▼ to **On** or **Off** and press **OK**.

8.1.2 Language

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. Scroll ▼ to **Language** and press **OK**.
4. The languages are listed (only 3 are visible), scroll ▼ to the required language and press **OK**.
5. Press Ⓞ to return to standby.

8.1.3 Writing input methods

Your FW200L has 21 different input methods to choose from. The input method selected will be the default method used when entering / editing text. You can also choose to change the input method when entering / editing text just once, this will not affect the default setting.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. Scroll ▼ to **Pref. input method** and press **OK**.
4. The input methods are listed (only 3 are visible), scroll ▼ to the required method and press **OK**.
5. Press Ⓞ to return to standby.

8.1.4 Turn off the display date and time


The FW200L can show the date and time on the standby screen, this feature can be set to on or off.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. Scroll ▼ to **Show date and time** and press **OK**.
4. The current setting is highlighted, scroll ▲ or ▼ to the required setting and press **OK**.
5. Press Ⓞ to return to standby.

8.1.5 Screen lock

You can set the FW200L screen to lock after a certain amount of time. The time settings include 15 secs / 30 secs / 1 min / 5 mins and Off.

Once the screen is locked press **Unlock** and  to unlock the screen.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. Scroll ▼ to **Screen auto lock** and press **OK**.
4. The current setting is highlighted, scroll ▲ or ▼ to the required setting and press **OK**.
5. Press  to return to standby.


8.1.6 Dedicated keys

The destination of the 4 navigational keys when press in standby can be set by the user.

The default is


FM radio	▲
Inbox	▼
Phonebook	◀
Write message	▶

Change the destinations

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. Scroll ▼ to **Dedicated keys** and press **OK**.
4. The current settings are listed (only the first 3 are visible), scroll ▼ to the dedicated key you want to change and press **Edit**.
5. The destinations available are listed (the current setting is highlighted), scroll ▲ or ▼ to the required destination and press **OK** to save
6. Press  to return to standby.

8.1.7 Display contrast

You can set the display contrast on the FW200L screen, there are 9 levels to choose from.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. Scroll ▼ to **Contrast** and press **OK**.
4. The current setting is show on the screen, scroll ◀ or ▶ to the contrast you require and press **OK**.
5. Press  to return to standby.

8.1.8 Backlight timeout

You can set the FW200L screen backlight to turn off after a certain amount of time. There are 12 levels to choose from.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. **Phone settings** is highlighted. Press **OK**.
3. Scroll ▼ to **Backlight Time Setting(sec)** and press **OK**.
4. The current setting is show on the screen, scroll ◀ or ▶ to the time you require and press **OK**.
5. Press Ⓞ to return to standby.

8.2 Call settings

The FW200L is compatible with Call waiting, Call divert and Call barring services, these can be activated or deactivated on the phone, but are network services, if the service isn't working once activated please contact your network operator.

8.2.1 Caller ID

You can set you phone so it sends or hides your caller ID information when you make a call, or you can choose to set it so it is network dependent.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. **Caller ID** is highlighted. Press **OK**.
4. Scroll ▲ or ▼ to the setting you require, either **Set by network**, **Hide ID** or **Send ID** and press **OK**.
5. Press Ⓞ to return to standby.

Note

This feature is network service dependent.

8.2.2 Call waiting

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▼ to **Call waiting**. Press **OK**.
4. Scroll ▼ to either **Activate**, **Deactivate** or **Query status** and press **OK**.
If you select **Query status**, the screen will display **Please wait** and then the status of the service will be displayed on the screen.
5. Press Ⓞ to return to standby.

Note

This feature is network service dependent.

8.2.3 Call divert

You can set the phone to divert all voice calls, divert if the call is unreachable, divert if there is no answer, divert if busy or divert all data calls. When activated you can choose to divert to a certain number or to voicemail.

Set call divers

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▼ to **Call divert** and press **OK**.
4. Scroll ▼ to either **Divert all voice calls**, **Divert if unreachable**, **Divert if no answer**, **Divert if busy**, or **Divert all data calls** and press **OK**.
5. Scroll ▼ to either **Activate**, **Deactivate** or **Query status** and press **OK**.
6. If you select **Activate** you have the below options.

Options	Actions
Divert all voice calls	The screen will display To new number , press OK , type in the number manually or press Options and scroll ▼ to From phonebook and press Select , scroll ▼ to the required contact and press OK . Press Options and Select to save. Scroll ▼ to To voicemail and press OK twice to save.
Divert if unreachable	The screen will display To new number , press OK , type in the number manually or press Options and scroll ▼ to From phonebook and press Select , scroll ▼ to the required contact and press OK . Press Options and Select to save. Scroll ▼ to To voicemail and press OK twice to save.
Divert if no answer	The screen will display To new number , press OK , type in the number manually or press Options and scroll ▼ to From phonebook and press Select , scroll ▼ to the required contact and press OK . Press Options and Select , scroll ▼ to select the number of seconds before the divert will activate and press OK . Scroll ▼ to To voicemail and press OK , scroll ▼ to select the number of seconds before the divert will activate and press OK .
Divert if busy	The screen will display To new number , press OK , type in the number manually or press Options and scroll ▼ to From phonebook and press Select , scroll ▼ to the required contact and press OK . Press Options and Select to save. Scroll ▼ to To voicemail and press OK twice to save.
Divert all data calls	The screen will display To new number , press OK , type in the number manually or press Options and scroll ▼ to From phonebook and press Select , scroll ▼ to the required contact and press OK . Press Options and Select to save.

7. If you select **Deactivate**, the screen will display **Please wait** and then the service

- you have chosen to deactivate will be displayed. Press **OK** to deactivate.
- If you select **Query status**, the screen will display **Please wait** and then the status of the service will be displayed on the screen.
 - Press **⊙** to return to standby.

Cancel call divers

- Press **Menu**, scroll **▼** to **Settings** and press **OK**.
- Scroll **▼** to **Call settings** and press **OK**.
- Scroll **▼** to **Call divert** and press **OK**.
- Scroll **▼** to **Cancel all divers** and press **OK**.
- The screen will display **Please wait** and then **All call divers deactivated**, press **OK**.
- Press **⊙** to return to standby.

Note

This feature is network service dependent.

8.2.4 Call barring

You can set the FW200L to bar incoming or outgoing calls.

Outgoing call barring

You can set the phone to bar all voice calls, all international voice calls or all international voice calls except to your home number.

- Press **Menu**, scroll **▼** to **Settings** and press **OK**.
- Scroll **▼** to **Call settings** and press **OK**.
- Scroll **▼** to **Call barring** and press **OK**.
- Outgoing calls** is highlighted. Press **OK**.
- Scroll **▼** to either **All voice calls**, **International voice calls** or **International voice calls except to home** and press **OK**.
- Scroll **▼** to either **Activate**, **Deactivate** or **Query status** and press **OK**.
If you select **Activate**, the screen will display **Call barring password**, enter the password and press **OK** to activate.
If you select **Deactivate**, the screen will display **Call barring password**, enter the password and press **OK** to deactivate.
If you select **Query status**, the screen will display **Please wait** and then the status of the service will be displayed on the screen.
- Press **⊙** to return to standby.

Incoming call barring

You can set the phone to bar all voice calls or voice calls when roaming.

- Press **Menu**, scroll **▼** to **Settings** and press **OK**.
- Scroll **▼** to **Call settings** and press **OK**.

3. Scroll ▼ to **Call barring** and press **OK**.
4. Scroll ▼ to **Incoming calls** and press **OK**.
5. Scroll ▼ to either **All voice calls** or **Voice calls when roaming** and press **OK**.
6. Scroll ▼ to either **Activate**, **Deactivate** or **Query status** and press **OK**.
If you select **Activate**, the screen will display **Call barring password**, enter the password and press **OK** to activate.
If you select **Deactivate**, the screen will display **Call barring password**, enter the password and press **OK** to deactivate.
If you select **Query status**, the screen will display **Please wait** and then the status of the service will be displayed on the screen.
7. Press Ⓞ to return to standby.

Cancel all barring

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▼ to **Call barring** and press **OK**.
4. Scroll ▼ to **Cancel all** and press **OK**.
5. The screen will display **Call barring password**, enter the password and press **OK** to cancel.

Change the call barring password

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▼ to **Call barring** and press **OK**.
4. Scroll ▼ to **Change barring password** and press **OK**.
5. Enter the old password and press **OK**.
6. Enter the new password and press **OK**.
7. Confirm the new password and press **OK**.
8. Press Ⓞ to return to standby.

Note

This feature is network service dependent.

8.2.5 Blacklist

You can set the FW200L so that when certain phone numbers call the phone does not ring. Contacts can be blocked through the phonebook menu, see “Add to blacklist” on page 24 or through the Blacklist menu. You can store up to 20 numbers in the Blacklist.

Setting a number to the blacklist

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▲ to **Advanced settings** and press **OK**.

4. **Blacklist** is highlighted. Press **OK**.
5. Scroll ▼ to **Blacklist numbers** and press **OK**.
6. The blacklist numbers stored will be listed (only the first 3 are visible).
7. Scroll ▼ to the next available space and press **Edit**.
8. Using the keypad type in the number you want to block and press **Options**.
9. Press **Done** to save or **Cancel** return to the previous screen without saving.
10. Press Ⓞ to return to standby.

Note

This feature is network service dependent.

Turning the blacklist feature on / off

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▲ to **Advanced settings** and press **OK**.
4. **Blacklist** is highlighted. Press **OK**.
5. **Reject numbers in blacklist** is highlighted. Press **OK**.
6. The current setting is highlighted, scroll to either **On** or **Off** and press **OK** to confirm.
7. Press Ⓞ to return to standby.

8.2.6 Call time reminder

You can set the FW200L to give a reminder beep after a set amount of time during a call. This can be set to off, to give a single beep or to beep periodically during calls.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▲ to **Advanced settings** and press **OK**.
4. Scroll ▼ to **Call time reminder** and press **OK**.
5. The current setting is highlighted, scroll ▲ or ▼ to select either **Off**, **Single** or **Periodic**.

If **Single** is selected, using the keypad set the time you want the reminder to beep between 1 and 3000 seconds. Once activated, during a call you will hear the beep once at the requested time.

If **Periodic** is selected, using the keypad set the time you want the beep to activate between 30 to 60 seconds. Once activated, during a call you will hear the beep at the set time and then again when the set time comes around again. E.g if it is set to 40 seconds, you will hear a beep at 40 seconds, then again at 80 seconds and then again at 120 seconds, this will continue throughout the call.

6. Press Ⓞ to return to standby.

8.2.7 Answer mode

You can set the FW200L so that any button pressed can answer a call.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▲ to **Advanced settings** and press **OK**.
4. Scroll ▼ to **Answer mode** and press **OK**.
5. If the feature is switched on there will be a box with a tick next to **Any key** press **Off** to turn it off.
6. If the feature is switched off there will be a black box next to **Any key** press **On** to turn it on.
7. Press Ⓞ to return to standby.

8.2.8 Delay dial

You can set the FW200L so that after dialling a number there is a delay before it automatically dials out. This can be set to between 1 and 9 seconds or off.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Call settings** and press **OK**.
3. Scroll ▲ to **Advanced settings** and press **OK**.
4. Scroll ▲ to **Delay dial** and press **OK**.
5. The current setting is highlighted, scroll ▲ or ▼ to select either **1-9 seconds** or **Off** and press **OK**.
6. Press Ⓞ to return to standby.

8.3 Network settings

You can set the FW200L to either automatically select a network or so it must be selected manually.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Network settings** and press **OK**.
3. **Network selection** is highlighted, press **OK**.
4. The current setting is highlighted, scroll ▲ or ▼ to select **Automatic** or **Manual** and press **OK**.
5. Press Ⓞ to return to standby.

8.4 Security settings

On the FW200L you can set both SIM security and phone security.

SIM security:

You can set the PIN lock as **On** or **Off**. During the start-up process, if it is set to on, the phone will prompt **Input PIN (Trials remain: 3)**.

Note

You only have 3 attempts to input the correct PIN code, if you input the incorrect

PIN code 3 times continuously, you must input the PUK number to set a new PIN code.

If you want to use this function, you must contact your network operator first, as the default PIN and PUK number are provided by your network operator.

To turn the SIM lock on / off

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Security settings** and press **OK**.
3. **SIM security** is highlighted, press **OK**.
4. **PIN lock** is highlighted, press **OK**.
5. Type in the SIM password and press **OK**, if the SIM lock was on this will turn the lock off and vice versa.

Note

Once the SIM lock is switched on you can change the SIM PIN code.

Change the SIM PIN

1. Turn on the PIN lock (see previous section).
2. Press ▼ to **Change PIN** or **Change PIN2** and press **Select**.
3. Enter the old PIN code, and then press **OK**.
4. Enter the new PIN code and then press **OK**.
5. Re-enter the new PIN code and press **OK** to confirm.
6. Press Ⓞ to return to standby.

Phone lock:

You can set the phone lock as **On** or **Off**. During the start-up process, if the lock is set to on, the phone will prompt **Input phone password (Trials remain: 3)**.

Note

The phone will automatically power off if you input the incorrect phone password 3 times continuously.

Change the PIN password

The default phone password is 1122, you can change this in the menu.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Security settings** and press **OK**.
3. Scroll ▼ to **Phone security** and press **OK**.
4. Scroll ▼ to **Change password** and press **OK**.
5. Using the keypad enter the old password and press **OK**.
6. Enter the new password and press **OK**.
7. Re-enter the new password and press **OK** to save.
8. Press Ⓞ to return to standby.

To turn the phone lock on / off

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Security settings** and press **OK**.
3. Scroll ▼ to **Phone security** and press **OK**.
4. **Phone lock** is highlighted, press **OK**.
5. Type in the phone password and press **OK**, if the phone lock was on this will turn the lock off and visa versa.

8.5 Restore settings

You can reset your FW200L to the default settings.

1. Press **Menu**, scroll ▼ to **Settings** and press **OK**.
2. Scroll ▼ to **Restore settings** and press **OK**.
3. Using the keypad type in the phone password and press **OK**.
4. Press **Yes** to restore or **No** to cancel.

9. Profile settings

You can personalise your phone profile, changing both the tones and their volume.

9.1 Ringer

9.1.1 Ringtone

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. **Tone settings** is highlighted, press **OK**.
3. **Ring** is highlighted, press **OK**.
4. The current ringtone is highlighted scroll ▲ or ▼ to the ring tone you require, you will hear a sample, press **Select** to confirm.
5. Press ⊙ to return to standby.

9.1.2 Ring volume

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. **Tone settings** is highlighted, press **OK**.
3. Scroll ▼ to **Ringtone volume** and press **OK**.
4. The current setting is show on the screen, scroll ◀ or ▶ to the volume you require, you will hear a sample, press **OK** to confirm.
5. Press ⊙ to return to standby.

9.1.3 Ring type

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. **Tone settings** is highlighted, press **OK**.
3. Scroll ▼ to **Ring type** and press **OK**.
4. The current setting is highlighted, scroll ▲ or ▼ to select **Repeat**, **Ascending** or **Beep once** and press **OK**.
5. Press ⊙ to return to standby.

9.2 Message

9.2.1 Message tone

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **Message** and press **OK**.
3. **Tone** is highlighted, press **OK**.
4. The current setting is highlighted, scroll ▲ or ▼ to the message tone you require, you will hear a sample, press **Select** to confirm.
5. Press ⊙ to return to standby.

9.2.2 Message tone volume

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **Message** and press **OK**.
3. Scroll ▼ to **Message volume** and press **OK**.
4. The current setting is show on the screen, scroll ◀ or ▶ to the volume you require, you will hear a sample, press **OK** to confirm.
5. Press Ⓞ to return to standby.

9.3 Keypad

9.3.1 Keypad tone

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **Key tone** and press **OK**.
3. **Keypad** is highlighted, press **OK**.
4. The current setting is highlighted, scroll ▲ or ▼ to select **Silent**, **Click** or **Tone** and press **OK**.
5. Press Ⓞ to return to standby.

9.3.2 Keypad tone volume

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **Key tone** and press **OK**.
3. Scroll ▼ to **Keystone volume** and press **OK**.
4. The current setting is shown on the screen, scroll ◀ or ▶ to the volume you require, press **OK** to confirm.
5. Press Ⓞ to return to standby.

9.4 Power on/off

9.4.1 Power on/off tone

You can set the power on and power off tones to different tones.

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **Power on/off** and press **OK**.
3. **Power on** is highlighted, press **OK**, or scroll ▼ to **Power off** and press **OK**.
4. The current setting is highlighted, scroll ▲ or ▼ to the tone you require, you will hear a sample, press **Select** to confirm.
5. Press Ⓞ to return to standby.

9.4.2 Power on/off tone volume

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **Power on/off** and press **OK**.
3. Scroll ▼ to **Volume settings** and press **OK**.
4. The current setting is show on the screen, scroll ◀ or ▶ to the volume you require, you will hear a sample, press **OK** to confirm.
5. Press Ⓞ to return to standby.

9.5 Error tone

If when using the FW200L there is an error you will hear a tone. This tone can be turned on or off.

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **System alert** and press **OK**.
3. Scroll ▲ or ▼ to **On** or **Off** and press **OK**.
4. Press Ⓞ to return to standby.

9.6 Alarm volume

1. Press **Menu**, scroll ▲ to **Profiles** and press **OK**.
2. Scroll ▼ to **Alarm volume** and press **OK**.
3. The current setting is show on the screen, scroll ◀ or ▶ to the volume you require, you will hear a sample, press **OK** to confirm.
4. Press Ⓞ to return to standby.

9.7 Silent mode

You can also set your FW200L to silent mode, when this is switch on your phone will remain silent during operations, such as incoming calls, new text message received and keypad operations.

1. Press and hold (#) for 3 seconds to turn silent mode on / off.

10. FM Radio

Your FW200L has a FM radio facility, so you can play your favourite radio stations through the base.

10.1 Turn the FM radio on

There are 2 ways to turn on the FM Radio,

If you haven't changed the destination of your navigation keys

1. Press **▲** in standby to turn on the radio and go straight to the **FM Radio** menu, press **Options** to enter the **FM Radio** submenu.

If the destination has been changed

1. Press **Menu**, scroll **▲** to **FM Radio** and press **OK**.
2. The radio will turn on automatically, press **Options** to enter the **FM Radio** submenu.
3. If have turned the radio off (see below) and are still in the **FM Radio** menu, press **Options**, scroll **▼** to **On** and press **Select** to turn the radio back on.
4. Press **⊙** to return to standby.

10.2 Turn the FM radio off

1. Go to the **FM Radio** menu (see above) and press **Options**.
2. **Off** is displayed, press **Select**.
3. Press **⊙** to return to standby.

10.3 Manually input radio channels

1. Go to the **FM Radio** menu (see above) and press **Options**.
2. Scroll **▼** to **Manual input** and press **Select**.
3. The last channel stored will be displayed, press **Clear** to delete.
4. Using the keypad enter the new channel (press **#** to enter a .).
5. Press **Options** and then **Select** to save.
6. Press **⊙** to return to standby.

10.4 Auto search radio channels

1. Go to the **FM Radio** menu (see above) and press **Options**.
2. Scroll **▼** to **Auto search** and press **Select**.
3. Press **Yes** to search or **No** to cancel.
4. If you choose **Yes** once the search is complete the radio will switch on and be tuned to the first channel in the list.
5. Press **⊙** to return to standby.

10.5 Channel list

1. Go to the **FM Radio** menu (see above) and press **Options**.
2. Scroll ▼ to **Channel list** and press **Select**.
3. The saved channels are listed (only the first 3 are visible), scroll ▼ to the required channel and press **Select**.
4. Scroll ▲ or ▼ to either **Play**, **Delete** or **Edit** and press **Select**.
5. If **Play** is selected, the radio will turn on.
6. If **Delete** is selected, press **Yes** to delete or **No** to cancel.
7. If **Edit** is selected you have can edit the channel name and frequency.

Options

Actions

Edit

The channel name is highlighted, press **Options** and **Select** to edit the name, press **Clear** to delete the current name and then using the keypad enter the new name, press **Options** and then **Select**. Scroll ▼ to **Frequency**, press **Clear** to delete the current channel and then using the keypad enter the new channel (press (#) to enter a decimal point). Press **Options** and then **Select** to save.

8. Press (Ⓜ) to return to standby.

Note

The name of the radio channel will be displayed when the radio is on and the screen is in standby mode.

11. Help

No display when the phone is turned on

- Check the USB cable is connected correctly
- Check the battery is charged
- Try turning the phone on and off again

Calls will not connect

- Check the network signal
- Try turning the phone on and off again
- Talk to your network operator

Display shows Inset SIM

- Insert the SIM card
- If the SIM is already inserted, remove and insert again
- Try another SIM card

The phone will not charge

- The charger may be damaged, try replacing with another charger
- The battery may be damaged, try replacing the battery

The phone has signal but will not make calls

- The phone may not have enough charge, try charging the phone
- Talk to your network operator

The phone has not picked up the network

- The phone number may be invalid, check with the network operator
- The signal may be weak, try moving the phone to a different place

12. General information

Important

This product is intended for connection GSM networks in Europe.

Important safety instructions

Follow these safety precautions when using your phone to reduce the risk of fire, electric shock, and injury to persons or property:

- Keep all slits and openings of the phone unblocked. Do not set the phone on a heating register or over a radiator. Ensure that proper ventilation is provided at the installation site.
- Do not use while wet or while standing in water.
- Do not use this product near water (for example, near a bath tub, kitchen sink, or swimming pool).
- Do not allow anything to rest on the power cord. Place the power cord so that it will not be walked on.
- Never insert objects of any kind into the product vents as that may result in fire or electric shock.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not disassemble this product. If service or repair work is required, contact the customer service helpline found in this user's Guide.
- Do not overload wall outlets and extension cords.
- Avoid using during an electrical storm. Use a surge protector to protect the equipment.
- Do not use this phone to report a gas leak, especially if you are in the vicinity of the gas line.

Important

To reduce the risk of fire, use only the supplied power adaptor.

Unplug this phone immediately from an outlet if:

- The power cord or plug is damaged or frayed.
- Liquid has been spilled on the product.
- The product has been exposed to rain or water. Do not retrieve the base until after you have unplugged the power the wall. Then retrieve the unit by the unplugged cords.
- The product has been dropped or the cabinet has been damaged.
- The product exhibits a distinct change in performance.

Installation Guidelines

- Read and understand all instructions and save them for future reference.
- Follow all warnings and instructions marked on the product.
- Do not install this product near a bath tub, sink, or shower.
- Operate this phone using only the power source that is indicated on the marking label. If you are unsure of the power supply to your home, consult with your dealer or local power company.
- Do not place this product on an unstable cart, stand, or table. This product may fall, causing serious damage to the product.
- Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation.
- Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery. The battery contains toxic materials that could be released, resulting in injury.

Important

There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the batteries that came with your phone or an authorized replacement recommended by the manufacturer.

- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.
- Do not dispose of batteries in fire, which could result in explosion.
- The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods.

SAVE THESE INSTRUCTIONS

Cleaning

- Clean the phone with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this may cause static shock.

Environmental

- Do not expose to direct sunlight.
- The phone may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to

avoid damage, do not place the product on antique / veneered wood.

- Do not place your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosives or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power cord during an electrical storm.

Product disposal instructions

Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product according to your local authority's recycling processes. For more information, please contact your local authority or the retailer where the product was purchased.



Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.



Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by Meizhou Guo Wei Electronics Co. LTD., AD1 section, The economy exploitation area, Meizhou, Guangdong, P.R.China. ("MZGW")

What Does this Warranty Cover?

Subject to the exclusions contained below, MZGW warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Limited Warranty is your exclusive warranty and is not transferable.

Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What will MZGW do?

MZGW or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this limited warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR MZGW BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	Two (2) years from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories (battery, power supply(s) and line cords)	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola or MZGW are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, MZGW or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call: +34 902 006 949.

E-mail: satconsumo@telcomdis.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a MZGW Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

For GSM the product operates in the frequency range of Tx: 880 -915MHz, Rx: 925 - 960MHz, and the RF transmission power is 2W (Max.)

For DCS the product operates in the frequency range of Tx: 1710 -1785MHz, Rx: 1805 - 1880MHz, and the RF transmission power is 1W (Max.)

Power adaptor for the base (Model no.: S005AYV0500050, Manufacturer: TENPAO)

RE Directive

The equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU.

FCC Regulatory Compliance

Body worn operation

The device complies with RF specifications when used at a distance of 1.0 cm from your body. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

Certification information (SAR)

This device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

The SAR limit adopted by the USA is 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported to the FCC for this device type complies with this limit.

The highest SAR value reported to the FCC for this device type when using in portable exposure conditions is 0.33 W/kg.

FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not expressly approved by Shenzhen Guo Wei Electronics Co., Ltd. for compliance could void the user's authority to operate the equipment.

<This page has been intentionally left blank>

<This page has been intentionally left blank>

<This page has been intentionally left blank>



EU Declaration of Conformity

We, Meizhou Guowei Electronics Co., Ltd. declare under our sole responsibility that the following products:

Brand name: Motorola
Type: FW200L
Descriptions: Fixed Wireless Telephone

to which this declaration related is in conformity with the essential requirements of the following directives of the Council of the European Communities:

- Radio Equipment Directive (2014/53/EU)
- Ecodesign Directive (2009/125/CE)

The products are compliant with the following standards:

Safety: EN60950-1: 2006+A11:2009+A1:2010+A12:2011+A2:2013
Health: EN50566:2013 y EN62209-2:2010
EMC: EN301489-1 v2.2.0 y EN301489-52 v1.1.0
EN55032:2015 y EN55020:2007/A11:2011
RF Spectrum: EN301511 v9.0.2 y EN303 345 V1.1.7
Ecodesign: EC No 278/2009, 6 April 2009

For and on behalf of Meizhou Guowei Electronics Co., Ltd.

Signature: _____

Printed name & Position: Jack Luo –Chief Technical Officer

Date: 31 JAN 2018

Place: AD1 section, The economy exploitation area, Meizhou,
Guangdong, P.R.China

TELCOMDIS TECNOLOGÍA, S.L.
C/ ARAGONESES 2
28108 ALCOBENDAS
MADRID
SPAIN

Manufactured, distributed or sold by MZGW Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2018 Motorola Mobility LLC. All rights reserved.

Version 3 (EN ES)

